

# CM ProSlide APPLICATION OF T-POD



1. Slide ProSlide under the patient, at the same level as trochanter major.  
Note: Never slide in ProSlide directly against the patient's skin.



2. Thread the belt through the handle.




3. Pull the belt under the patient, using ProSlide.



4. Make proper size adjustment.



5. Apply the pulley system and secure the compression.

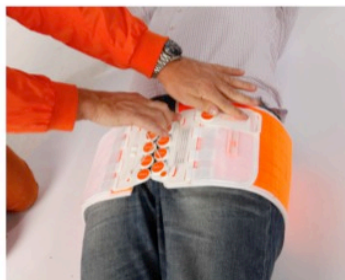

Manufacturer of CM ProSlide: Comfort Medical AB

Made in Sweden

DISTRIBUTOR: